


Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. 2 P. 30
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - u If the indicator light is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Make sure engine stop switch is in  (Run) position. 2 P. 26
- Make sure the side stand is raised.
- Check for a blown fuse. 2 P. 89
- Check for a loose battery connection or battery terminal corrosion. 2 P. 51
- Check the condition of the battery. 2 P. 86

If the problem continues, have your scooter inspected by your dealer.