
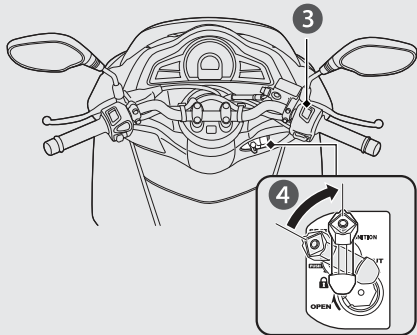


## Starting the Engine *(Continued)*

- 3 Make sure the engine stop switch is in the  (Run) position.
- 4 Turn the ignition switch to the ON position.



- 5 Press the start button with the throttle completely closed. Release the start button as soon as the engine starts.

