

Items		Frequency*1									
		× 1,000 mi	0.6	2.5	5	7.5	10	12.5	15	Refer to page	
		× 1,000 km	1.0	4	8	12	16	20	24		
Emission-Related Items	Fuel Line	🔧		I	I	I	I	I	I	-	
	Throttle Operation	🔧		I	I	I	I	I	I	78	
	Air Cleaner*2						R			69	
	Crankcase Breather*3			C	C	C	C	C	C	79	
	Spark Plug				R		R		R	63	
	Valve Clearance	🔧	I	I	I	I	I	I	I	-	
	Engine Oil		Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 5,000 mi (8,000 km) or 12 months: R								66
	Engine Oil Strainer Screen				C		C		C	66	
	Engine Idle Speed	🔧	I	I	I	I	I	I	I	-	
	Radiator Coolant*5				I		I		I	70	
	Cooling System	🔧			I		I		I	-	
Evaporative Emission Control System*4	🔧					I		I	-		

Maintenance Level

- 🔧 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 109).
- 🔧 : Technical. In the interest of safety, have your scooter serviced by your dealer.

Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R : Replace
- C : Clean