


## Inspecting the Front Brake Pads

Check the condition of the brake pad wear indicators.

The pads need to be replaced if a brake pad is worn to the indicator.

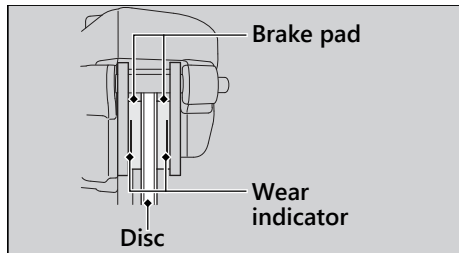

1. Inspect the brake pads from underneath the brake caliper.

If necessary have the pads replaced by your dealer.


Always replace both left and right brake pads at the same time.

## Inspecting the Rear Brake Lever Freeplay

1. Place the scooter on its center stand.
2. Measure the distance of the rear brake lever before the starts to take hold.

### Freeplay at the tip of the brake lever:

$\frac{3}{8}$  -  $\frac{13}{16}$  in (10 - 20 mm)

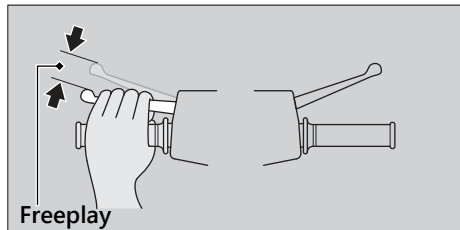

Check the brake cable for kinks or signs of wear. If necessary have it replaced by your dealer.