


Instruments (Continued)

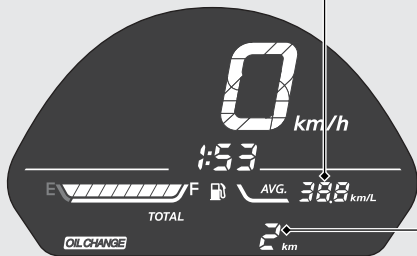

Average fuel mileage meter [AVG]

The average fuel mileage will be based on tripmeter.
 Average fuel mileage since tripmeter was reset.
 When " --- " is displayed except after the average fuel mileage has been reset, go to your dealer for service.

Odometer [TOTAL] & Tripmeter [TRIP]

SEL switch selects the odometer and tripmeter.

- Odometer:
Total distance ridden.
- Tripmeter:
Distance ridden since tripmeter was reset.
To reset tripmeter, press and hold **SET** switch with tripmeter displayed.
The average fuel mileage is also reset.