



OIL CHANGE indicator

The indicator is turned on whenever the running distance reaches the programmed oil change interval.

When the running distance reaches about 1,000 km (600 miles):

Reset the indicator for the 1st time.

When the running distance reaches about every 6,000 km (4,000 miles) after the 1st time resetting:

Reset the indicator whenever it is turned on.

After changing the engine oil (➔P.83), be sure to reset the indicator.

To reset the indicator, press and hold the **SET** switch while turning the ignition switch to the **I** (On) position, and keep holding the **SET** switch for more than 3 seconds.

The indicator does not go off until it is reset.

If the oil is changed before the oil change indicator comes on, be sure to reset the oil change indicator after changing the oil.

When resetting the indicator during no indication, the indicator will appear for 2 seconds, then disappear.