

The following moves the ordinary display at display setting.

- The switch is not pressed for about 30 seconds
- Turn the ignition switch to the **○** (Off) position and then to the **┃** (On) position

1 Clock setting:

 
- 1 Turn the ignition switch to the **┃** (On) position.
- 2 Press and hold **SEL** switch and **SET** switch, the all clock digits start flashing.
- 3 Press **SET** switch, the hour digits start flashing.
- 4 Press **SEL** switch until the desired hour is displayed.
 - ▶ Press and hold to advance the hour fast.



- 5 Press **SET** switch. The minute digits start flashing.



- 6 Press **SEL** switch until the desired minute is displayed.
 - ▶ Press and hold to advance the minute fast.



- 7 Press **SET** switch. The clock is set, and then the display moves to the backlight brightness adjustment. (backlight brightness indicator and backlight brightness adjustment segments start flashing.)