

Instruments *(Continued)*

2 Backlight brightness adjustment:

You can adjust the brightness to one of five levels.

- 1 Press **SET** switch, the backlight brightness indicator and backlight brightness adjustment segments stop flashing.
- 2 Press **SEL** switch. The brightness is switched.



- 3 Press **SET** switch. The backlight is set, and then the display moves to the changing of the fuel mileage meter unit. (fuel mileage meter unit start flashing.)

3 Changing the fuel mileage meter unit:

- 1 Press **SET** switch, the fuel mileage meter unit start flashing fast.
- 2 Press **SEL** switch to select "km/L" or "L/100 km".



- 3 To end the selection, press **SET** switch.

The established setting can also be set by turning the ignition switch to the **○** (Off) position.

The control is automatically switched from the setting mode to the ordinary display if the switch is not pressed for about 30 seconds. Even in this case, setting is maintained.