

Ignition switch

Switches the electrical system on/off, locks the steering, and operates the fuel lid and seat opener switch.

To unlock the ignition switch:

 P.32

| (On) Turns electrical system on for starting/riding.

SEAT FUEL Operates the fuel lid and seat opener switch.

○ (Off) Turns engine off.

🔒 (Lock) Locks steering.

