

Honda SMART Key System *(Continued)*

Switching the Honda SMART Key System

To switch the Honda SMART Key system to activation or deactivation

Press the ON/OFF button until the LED colour of the Honda SMART Key changes.

To check the Honda SMART Key system status

Lightly press the ON/OFF button. The LED of the Honda SMART Key will show the status.

When the LED of the Honda SMART Key is:

Green: Honda SMART Key system authentication can be performed.

Red: Honda SMART Key system authentication can not be performed.

