

## Honda SMART Key System (Continued)

### Switching the ignition switch

#### To Unlock the Ignition Switch

- 1 Make sure that the Honda SMART Key is activated. **➡P.28**
- 2 To authenticate the Honda SMART Key system, push the ignition switch.
  - ▶ When properly authenticated and the ignition switch is unlocked, the buzzer rings 2 times, the Honda SMART Key indicator and ignition switch ring come on.
  - ▶ The buzzer sound can be cancelled. **➡P.34**
- 3 Turn the ignition switch to the **I** (On) position while the Honda SMART Key indicator comes on.
  - ▶ If you do not turn the ignition switch to the **I** (On) position within 20 seconds after pushing in the ignition switch in, the Honda SMART Key indicator and ignition switch ring will go off, the turn signals flash 1 time, and then the ignition switch will be locked.

### When the Honda SMART Key system does not work properly **➡P.108**

If someone without the Honda SMART Key tries to turn the ignition switch, the ignition switch rotates freely. If you notice the ignition switch is in a different position, turn the ignition switch to the original position (O (Off) or **I** (Lock)).

