

 
## Anti-theft Alarm System *(Continued)*

### Adjusting the Sensitivity of Anti-theft Alarm System


You can select from 3 sensitivity levels for the anti-theft alarm system.

- 1 Make sure that the Honda SMART Key system is activated. ➔ **P.28**
- 2 Remove the battery cover. ➔ **P.77**
- 3 Push the ignition switch to authenticate the Honda SMART Key system. ➔ **P.32**
- 4 Connect the EM mode coupler provided in the tool kit to the EM mode connector. ➔ **P.111**
  - ▶ The Honda SMART Key indicator and ignition switch ring go off.

**Alarm button**



**Ignition switch**

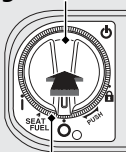

**Ignition switch ring**

- 5 Push the ignition switch 1 time.
- 6 Repeat this step 3 times as follows: Press the alarm button on the Honda SMART Key 2 times and the ignition switch 1 time.
  - ▶ When the alarm button is pressed, the LED on the Honda SMART Key comes on. Make sure the LED went off before the next button pressing.
  - ▶ If the alarm button or ignition switch is not pressed for 1 minute, the Honda SMART Key indicator starts blinking and this mode will be cancelled. If so, remove the EM mode coupler, return to 3 and follow the procedure again.