

- 7 Press the alarm button to select from 3 sensitivity level of anti-theft alarm system.
3 times of alarm rings: high sensitivity
2 times of alarm rings: middle sensitivity
1 time of alarm rings: low sensitivity
The Honda SMART Key indicator and ignition switch ring come on while setting.
- 8 Wait for about 10 seconds until the ignition switch ring starts blinking. The sensitivity level is set.
- 9 Remove the EM mode coupler from the EM mode connector to finish setting.
 - ▶ The sensitivity level is also set if you remove the EM mode coupler before the ignition switch ring starts blinking.
- 10 Store the EM mode coupler in the tool kit. Reinstall the parts in reverse order.

| If the Anti-Theft Alarm System Does Not Operate Properly

If any of the following situations arise, battery (➡ P.76) in the scooter is discharged or there is a system problem. Remove the battery and see your dealer.

- The alarm does not ring.
- The alarm rings but fades out.
- The alarm system does not stop.