


Idling Stop System *(Continued)*

Stopping the engine by the Idling Stop System


The engine stops and Idling Stop indicator changes to flash after you close the throttle completely and stop the scooter while the Idling Stop indicator is on.

- ▶ While the engine is stopped by the Idling Stop system, if you press the Idling Stop switch to IDLING, the Idling Stop system will be cancelled. The engine will not restart even when you open the throttle.

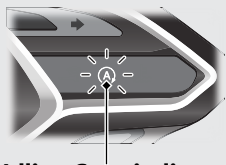

Idling Stop indicator

Safety Precaution for the Idling Stop System

Do not go away from the scooter while the Idling Stop indicator is flashing. When you go away from the scooter, always turn the ignition switch to the  (Off) position.

- ▶ The engine may start unexpectedly if the throttle is opened.

Engine is Not Stopped by the Idling Stop System While the Idling Stop Indicator is On: P.106

NOTICE

Stopping by the Idling Stop system for a long time may cause battery discharge.