

Starting the Engine

Start your engine using the following procedure, regardless of whether the engine is cold or warm.

This scooter is equipped with a side stand ignition cut-off system.

- ▶ If the side stand is down, the engine cannot be started.
- ▶ If you lower the side stand with the engine running, it will automatically shut off.

This scooter is equipped with a Honda SMART Key system. Always keep Honda SMART Key on you when you ride the scooter. ➔ P.29

NOTICE

- If the engine does not start within 5 seconds, turn the ignition switch to the ○ (Off) position and wait 10 seconds before trying to start the engine again to recover battery voltage.
- Extended fast idling and reving the engine can damage the engine, and the exhaust system.
- The engine will not start if the throttle is fully open.
- If the scooter is over-turned, you must first turn the ignition switch to the ○ (Off) position and then inspect the scooter carefully.

- 1 Place the scooter on its centre stand.
- 2 Turn the ignition switch to the | (On) position.

▶ To unlock the ignition switch. ➔ P.32

