


Removing & Installing Body Components

Battery

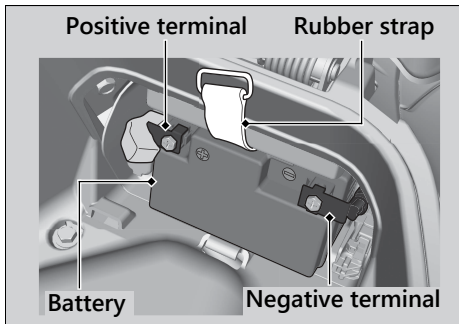

Removal

Make sure the ignition switch is in the O (Off) position.

1. Remove the battery cover. ➤ P. 77
2. Unhook the rubber strap.
3. Disconnect the negative \ominus terminal from the battery.

4. Disconnect the positive \oplus terminal from the battery.
5. Remove the battery taking care not to drop the terminal nuts.

Installation

Install the parts in the reverse order of removal.

Always connect the positive \oplus terminal first. Make sure that bolts and nuts are tight.

Make sure the clock information is correct after the battery is reconnected. ➤ P. 19

The anti-theft alarm system will be deactivated if the battery is disconnected. The system will remain off when the battery is reconnected.

To activate the system, turn the ignition switch to the I (On) position once.

For proper handling of the battery, see

"Maintenance Fundamentals." ➤ P. 67

"Battery Goes Dead." ➤ P. 115