


## Battery Cover

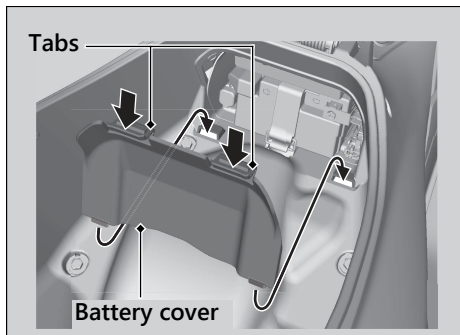

### Removal

1. Open the seat. ► P. 56
2. Press the tabs and remove the battery cover.

### Installation

Install the parts in the reverse order of removal.