

11. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

**Torque:** 24 N·m (2.4 kgf·m, 18 lbf·ft)

12. Fill the crankcase with the recommended oil (► P. 69, ► P. 135) and install the oil fill cap/dipstick.

**Required oil**

**When changing oil & cleaning the strainer screen:**

0.9 L (1.0 US qt, 0.8 Imp qt)

**When changing oil only:**

0.8 L (0.8 US qt, 0.7 Imp qt)

13. Check the oil level. ► P. 82  
 14. Check that there are no oil leaks.