

Cleaning the Crankcase Breather

1. Place a suitable container under the crankcase breather tube.
2. Place a suitable container under the crankcase breather plug.
3. Remove the crankcase breather tube plug from the tube.
4. Remove the crankcase breather plug from the air cleaner case.
5. Drain deposits into a suitable container.
6. Install the crankcase breather tube plug.
7. Install the crankcase breather plug.

