

### Adjusting the Headlight Aim

You can adjust vertical aim of the headlights for proper alignment. Turn the pinion in or out as necessary using a Phillips screwdriver provided in the tool kit (▶ P. 75). Obey local laws and regulations.

