

Troubleshooting

Engine Will Not Start	P. 100	Engine Does Not Start Even If the Throttle is Opened	P. 107
Overheating (High coolant temperature indicator is on)	P. 101	When the Honda SMART Key System Does Not Operate Properly	P. 108
Warning Indicators On or Flashing	P. 102	Unlock the Seat in an Emergency	P. 110
PGM-FI (Programmed Fuel Injection)		Unlock the Ignition Switch in an Emergency	P. 111
Malfunction Indicator Lamp (MIL).....	P. 102	Tyre Puncture	P. 114
Honda SMART Key Indicator.....	P. 103	Electrical Trouble	P. 115
Other Warning Indications	P. 104	Battery Goes Dead.....	P. 115
Fuel Gauge Failure Indication.....	P. 104	Burned-out Light Bulb	P. 115
When the Idling Stop System Does Not Operate Properly	P. 105	Blown Fuse.....	P. 118
Idling Stop Indicator Does Not Come On ..	P. 105	Unstable Engine Operation Occurs Intermittently	P. 119
Engine is Not Stopped by the Idling Stop System While the Idling Stop Indicator is On.....	P. 106		