

## Starter Motor Operates But Engine Does Not Start

---

Check the following items:

- Check the correct engine starting sequence. ➤ P. 48
- Check that there is petrol in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
  - ▶ If the indicator lamp is on, contact your dealer as soon as possible.

## Starter Motor Does Not Operate

---

Check the following items:

- Check the correct engine starting sequence. ➤ P. 48
- Check for a blown fuse. ➤ P. 118
- Check for a loose battery connection (➤ P. 76) or battery terminal corrosion (➤ P. 67).
- Check the condition of the battery. ➤ P. 115

If the problem continues, have your scooter inspected by your dealer.