

Honda SMART Key Indicator

When the Honda SMART Key indicator flashes 5 times

Replacing the Honda SMART Key Battery ► P. 97

When the Honda SMART Key indicator is flashing while the ignition switch is in the (On) position

The Honda SMART Key indicator flashes when communication between your scooter and Honda SMART Key stops after turning the ignition switch to the (On) position. It is probably caused by the following:

- Strong radio waves or noise are affecting the system
- You lose the Honda SMART Key while riding

However, this does not affect the operation of your scooter until the ignition switch is locked.

If you turn the ignition switch to the SEAT FUEL, ○ (Off) or 🔒 (Lock) position while the Honda SMART Key indicator is flashing, the ignition switch ring, Honda SMART Key indicator will come on, and the buzzer rings for about 20 seconds, automatically go off, and then the ignition switch is locked.

► Turn signal lights blink at the beginning and end of this function.

Also, to stop this flashing and ringing, press and hold the ignition switch for more than 2 seconds. After the flashing and ringing stop, the ignition switch is locked.

If you do not have the Honda SMART Key, the ignition switch can be unlocked in another way. ► P. 111