

## When the Idling Stop System Does Not Operate Properly

### Idling Stop Indicator Does Not Come On

---

When the Idling Stop indicator does not come on, perform the followings.

**If the Idling Stop switch is at IDLING:**

Press the Idling Stop switch to IDLING STOP.

**If the engine is cold:**

Warm up the engine.

The Idling Stop system does not operate when the engine is cold.

**If you did not ride the scooter after engine starts:**

Ride the scooter at speeds of over 10 km/h (6 mph). The Idling Stop system does not operate until you ride once.

**If PGM-FI malfunction indicator lamp (MIL) lights:**

When the PGM-FI malfunction indicator lamp (MIL) lights, the Idling Stop system does not operate for protection of the engine. See your dealer.

**If the battery voltage is low:**

Ride the scooter awhile, then stop the engine and then restart the engine with start button referring to the starting procedure (▶ P. 48) for standard engine starting. The Idling Stop system may not operate if the battery voltage is low.

If this occurs frequently, contact your dealer.