

## M

### Maintenance

Fundamentals .....	65
Importance .....	61
Safety .....	61
Schedule .....	62

Maximum Weight Limit.....	11, 134
---------------------------	---------

Modifications.....	10
--------------------	----

## O

Odometer .....	16, 124
----------------	---------

### Oil

Engine .....	69, 82
--------------	--------

OIL CHANGE indicator.....	17
---------------------------	----

Overheating .....	101
-------------------	-----

## P

Parking .....	8
---------------	---

Parts Location .....	12
----------------------	----

Petrol.....	9, 53, 134
-------------	------------

### PGM-FI (Programmed Fuel Injection)

Malfunction Indicator Lamp (MIL)....	21, 102
--------------------------------------	---------

Protective Apparel.....	6
-------------------------	---

## R

### Recommended

Coolant.....	70
--------------	----

Fuel.....	53
-----------	----

Oil .....	69
-----------	----

Refuelling.....	53
-----------------	----

### Removal

Battery.....	76
--------------	----

Battery Cover .....	77
---------------------	----

Front Lid .....	78
-----------------	----

Repair Kit.....	114
-----------------	-----

Riding Precautions .....	7
--------------------------	---

## S

Safety Precautions.....	6
-------------------------	---

Seat .....	56
------------	----

Serial Numbers.....	131
---------------------	-----

Side Stand.....	93
-----------------	----

Side Stand Ignition Cut-off System .....	48, 93
--	--------

Spark Plug .....	79
------------------	----

Specifications.....	134
---------------------	-----

Speedometer .....	15
-------------------	----

Start Button.....	24
-------------------	----

Starting the Engine .....	48
---------------------------	----