## HELMET HOLDER


The helmet holder (1) is on the left side below the rear fender.

Insert the ignition key (2) and turn it counterclockwise to unlock. Hang your helmet on the holder pin (3). Turn the key clockwise to lock the holder and then remove the key.

## **AWARNING**

Riding with a helmet attached to the holder can interfere with the rear wheel or suspension and could cause a crash in which you can be seriously hurt or killed.

Use the helmet holder only while parked. Do not ride with a helmet secured by the holder.

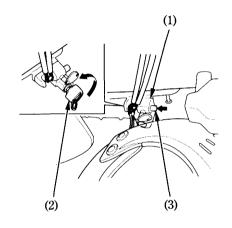

- (1) Helmet holder (2) Ignition key
- (3) Holder pin