

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]								Refer to Page
			× 1,000 km	1	6	12	18	24	30	36	
			× 1,000 mi	0.6	4	8	12	16	20	24	
		MONTH	6	12	18	24	30	36			
* FUEL LINE					I		I		I	—	
* FUEL STRAINER SCREEN				C	C	C	C	C	C	—	
* THROTTLE OPERATION					I		I		I	76	
AIR CLEANER		NOTE (2)				R			R	63	
* SUB AIR CLEANER						R			R	—	
CRANKCASE BREATHER		NOTE (3)		C	C	C	C	C	C	65	
SPARK PLUG				I	R	I	R	I	R	74	
* VALVE CLEARANCE				I	I	I	I	I	I	—	
ENGINE OIL		NOTE (4)		R	R	R	R	R	R	66	
ENGINE OIL FILTER				R		R		R		72	
* ENGINE OIL STRAINER SCREEN IN DOWN TUBE						C		C		—	
* ENGINE IDLE SPEED				I	I	I	I	I	I	77	
* SECONDARY AIR SUPPLY SYSTEM						I		I		—	