


1. Start the engine and let it idle for 5 minutes.
2. Stop the engine, place an oil drain pan under the crankcase. Remove the oil filler cap/dipstick, the drain bolt (1) on the down tube and drain bolt (2) on the left crankcase.
3. After the oil has drained, make sure the sealing washers on the drain bolts are in good condition.
4. Install the drain bolt to the specified torque.

Crankcase drain bolt torque:

24 N·m (2.4 kgf·m , 18 lbf·ft)

Frame drain bolt torque:

39 N·m (4.0 kgf·m , 29 lbf·ft)

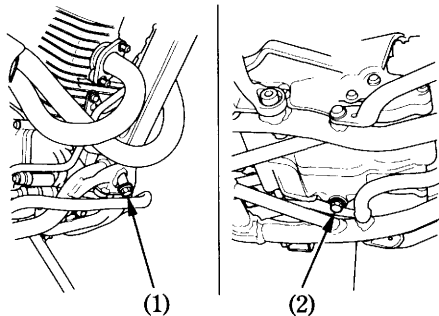

(1) Drain bolt (down tube)

(2) Drain bolt (left crankcase)