


Fuse Box:

The fuse box (1) is located behind the left side cover.

The specified fuses are:

15A, 5A

1. Remove the left side cover (page 39).
2. Release the tabs (2), then remove the fuse box cover (3).
3. Pull out the old fuse and install a new fuse.
The spare fuses (4) are located in the fuse box.
4. Install the fuse box cover and the left side cover.

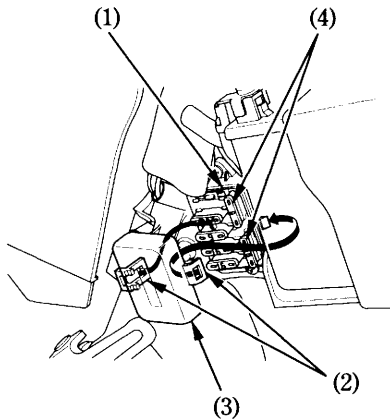

- (1) Fuse box
- (2) Tabs
- (3) Fuse box cover
- (4) Spare fuses