


Compression Damping

You can adjust the compression damping by the adjuster to suit the load or the road surface. The compression damping adjuster has at least 20 positions. Turning the adjuster one full turn advances the adjuster 8 positions. Turn clockwise to increase compression damping (hard), or turn counterclockwise to decrease compression damping (soft). The standard position is approximately 7-11 positions from the maximum setting so that the punch mark on the adjuster aligns with the reference punch mark.

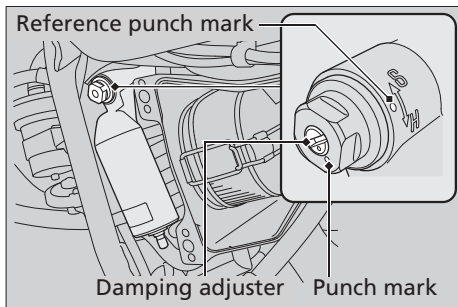

NOTICE

Do not turn the adjuster beyond the limits.

NOTICE

The rear shock absorber damper unit contains high pressure nitrogen gas. Do not attempt to disassemble, service, or improperly dispose of the damper. See your dealer.