

Troubleshooting

Engine Will Not Start	P. 81
Tire Puncture	P. 82
Tube Repair and Replacement	P. 82
Removing Wheels	P. 82
Electrical Trouble	P. 88
Battery Goes Dead	P. 88
Burned-out Light Bulb	P. 88
Blown Fuse	P. 91