


Switches

Headlight dimmer switch

- ☰☐ : High beam
- ☷☐ : Low beam

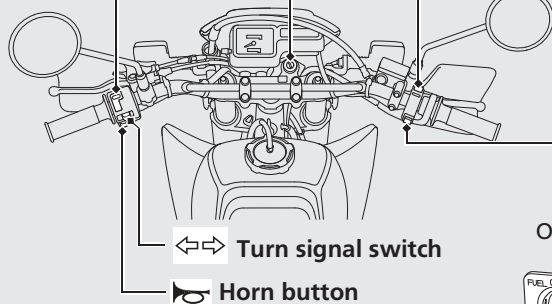

Turn signal switch



Horn button

Engine stop switch

Should normally remain in the (Run) position.

- u In an emergency, switch to the (Off) position to stop the engine.



 
 
Start button

Headlight turns off when operating the starter motor.

ON

OFF

RES



Fuel valve

Fuel valve

The manual fuel valve is located on the left side under the fuel tank.

The three-way fuel valve is used to control the flow of fuel from the fuel tank to the carburetors.

ON - Normal position for riding.

OFF - For parking, storing, or transportation.

RES - For extra fuel to get to a gas station for refueling. [Refueling](#) (P25)