


Shroud

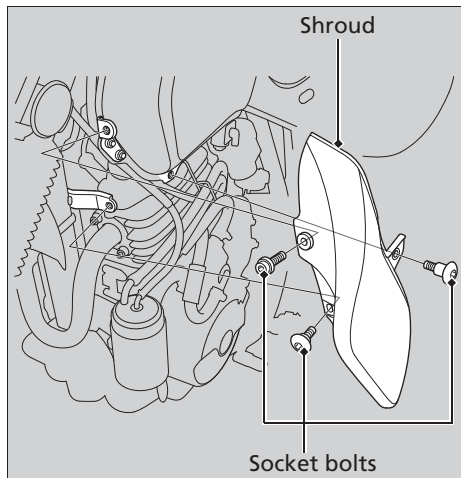

The shroud must be removed for access to the spark plug.

Removal

1. Remove the socket bolts.
2. Remove the shroud.

Installation

Install the parts in the reverse order of removal.