


## Battery

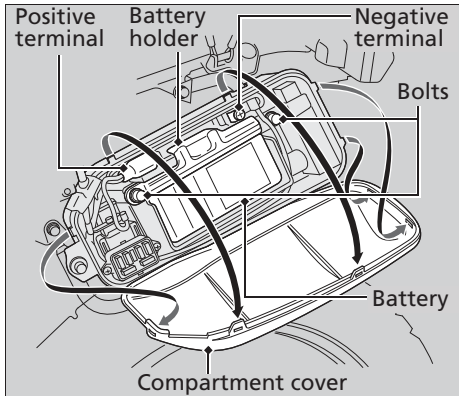

### Removal

Make sure the ignition switch is off.

1. Remove the left side cover. [P. 48](#)
2. Open the battery compartment cover.

3. Disconnect the negative - terminal lead from the battery first.
4. Disconnect the positive + terminal lead from the battery.
5. Remove the bolts and remove the battery holder.
6. Remove the battery taking care not to drop the terminal nuts.

### Installation

Install the parts in the reverse order of removal. Always connect the positive + terminal first. Make sure that bolts and nuts are tight. For proper handling of the battery, see "Maintenance Fundamentals." [P. 38](#) "Battery Goes Dead." [P. 88](#)