


Shroud

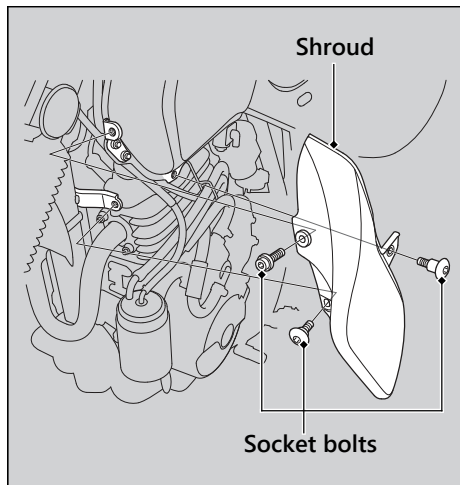

Removal

1. Remove the socket bolts.
2. Remove the shroud.

Installation

Install the parts in the reverse order of removal.