


## Left Side Cover

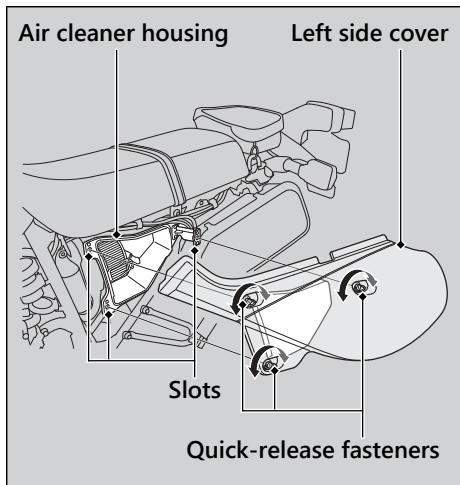

### Removal

1. Lift the D-ring on each quick-release fastener and turn it counterclockwise until it releases.
2. Remove the left side cover.

### Installation

1. Align the left side cover with the air cleaner housing.
2. Push each quick-release fastener into its slot, lift its D-ring, and turn it clockwise until it is secure.