

Checking Spark Plug

For the recommended spark plug, see "Specifications." ➤ P. 116

Use only the recommended type of spark plug in the recommended heat range.

NOTICE

Using a spark plug with an improper heat range can cause engine damage.

1. Remove the shroud. ➤ P. 51
2. Disconnect the spark plug cap from the spark plug.
3. Clean any dirt from around the spark plug base.
4. Remove the spark plug using the spark plug wrench provided in the tool kit.
5. Inspect the electrodes and center porcelain for deposits, erosion or carbon fouling.

- ▶ If the erosion or deposit is heavy, replace the plug.
 - ▶ Clean a carbon or wet-fouled plug with a plug cleaner, otherwise use a wire brush.
6. Check the spark plug gap using a wire-type feeler gauge.
 - ▶ If adjustment is necessary, bend the side electrode carefully.

The gap should be:

0.031 - 0.035 in (0.80 - 0.90 mm)

