

- 10.** Install new sealing washers onto the drain bolts. Tighten the drain bolts.

Crankcase

**Torque:** 18 lbf·ft (25 N·m, 2.5 kgf·m)

Down tube

**Torque:** 29 lbf·ft (39 N·m, 4.0 kgf·m)

- 11.** Fill the oil tank with the recommended oil.  
 ► P. 43, ► P. 116

**Required oil**

**When changing oil & engine oil filter:**

2.06 US qt (1.95 L)

**When changing oil only:**

2.0 US qt (1.9 L)

- To fill the oil tank to the upper level, oil should be added in two steps.

- 12.** Pour the recommended oil into the oil tank, up to the upper level mark.
- 13.** Install the oil fill cap/dipstick securely.
- 14.** Start the engine. Let it idle 5 minutes. During idling, support your motorcycle in an upright position on a firm, level surface to assure an accurate oil level reading.
- 15.** Stop the engine. Remove the oil fill cap/dipstick.
- 16.** Add the recommended oil up to the upper level mark. (Do not overfill.)
- 17.** Reinstall the oil fill cap/dipstick.
- 18.** Check the oil level. ► P. 57
- 19.** Check that there are no oil leaks.

**NOTICE**

Improper installation of the oil filter can result in serious damage to the engine.