


**NOTICE**

When installing a wheel or caliper into original position, carefully fit the brake disc between the pads to avoid scratching them.

- Position the lug on the speedometer gearbox against the lug on the right fork leg.

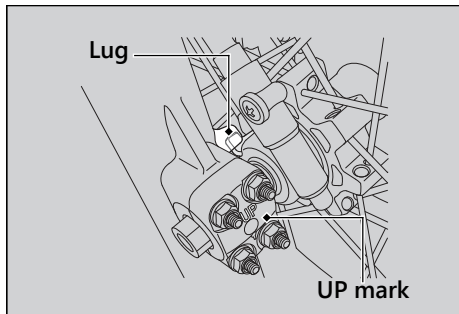

- Tighten the front axle shaft.

**Torque:** 63 lbf-ft (85 N·m, 8.7 kgf-m)

- Install the front axle holder with the UP mark upward and first tighten the front axle upper holder nuts, then tighten the lower holder nuts.

**Torque:** 9 lbf-ft (12 N·m, 1.2 kgf-m)

- After installing the wheel, apply the brake lever and pump the fork several times, then check if the wheel rotates freely. Recheck the wheel if the brake drags or the wheel does not rotate freely.
- Install the speedometer cable and tighten the screw securely.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.