


## Seat

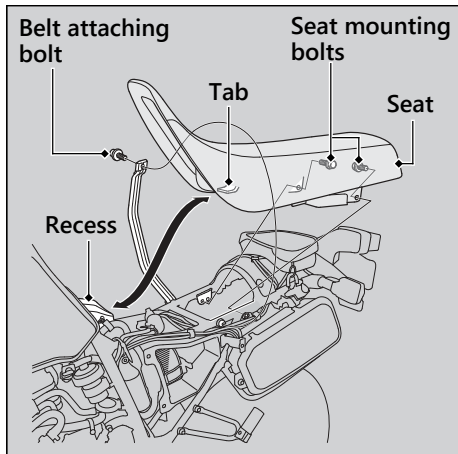

### Removal

1. Remove both side covers. ► P. 53, ► P. 54
2. Remove the belt attaching bolt.
3. Remove the seat mounting bolts.
4. Pull the seat backward.

### Installation

1. Insert the tab into the recess under the frame.
2. Tighten the seat mounting bolts securely.
3. Fasten the belt over the seat and tighten the belt attaching bolt securely.
4. Install both side covers.