

Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. ➔ P. 23
- Check that there is petrol in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - ▲ If the indicator lamp is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence. ➔ P. 23
- Check for a blown fuse. ➔ P. 86
- Check for a loose battery connection (➔ P. 49) or battery terminal corrosion (➔ P. 38).
- Check the condition of the battery. ➔ P. 82

If the problem continues, have your vehicle inspected by your dealer.