


## Brakelight/Taillight Bulb

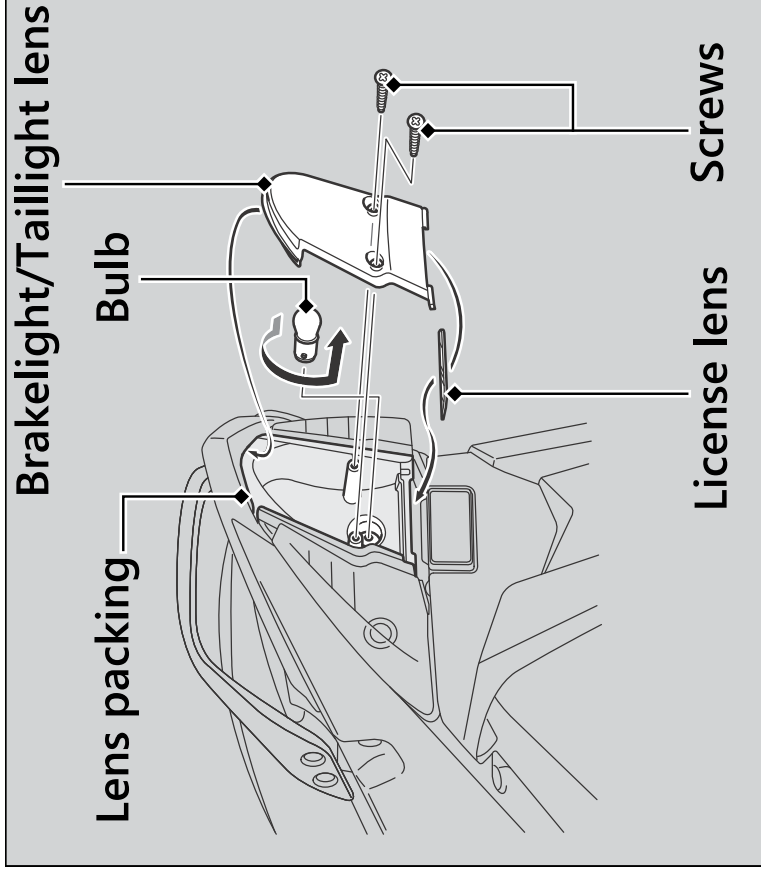

1. Remove the brakelight/taillight lens by removing the screws.
2. Remove the license lens.
3. Slightly press the bulb in and turn it counterclockwise.
4. Install a new bulb and parts in the reverse order of removal.
  - After putting back the lens packing in place, install the brakelight/taillight lens.