


## Blown Fuse

Before handling fuses, see "Inspecting and Replacing Fuses." ► P. 40

### Fuse Box Fuses

1. Open the seat. ► P. 30
2. Remove the battery cover ► P. 50.
3. Open the fuse box covers.
4. Pull out the fuses one by one to check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
  - Spare fuses are provided on back side of the battery cover.
5. Close the fuse box covers.
6. Install the battery cover.
7. Close the seat.

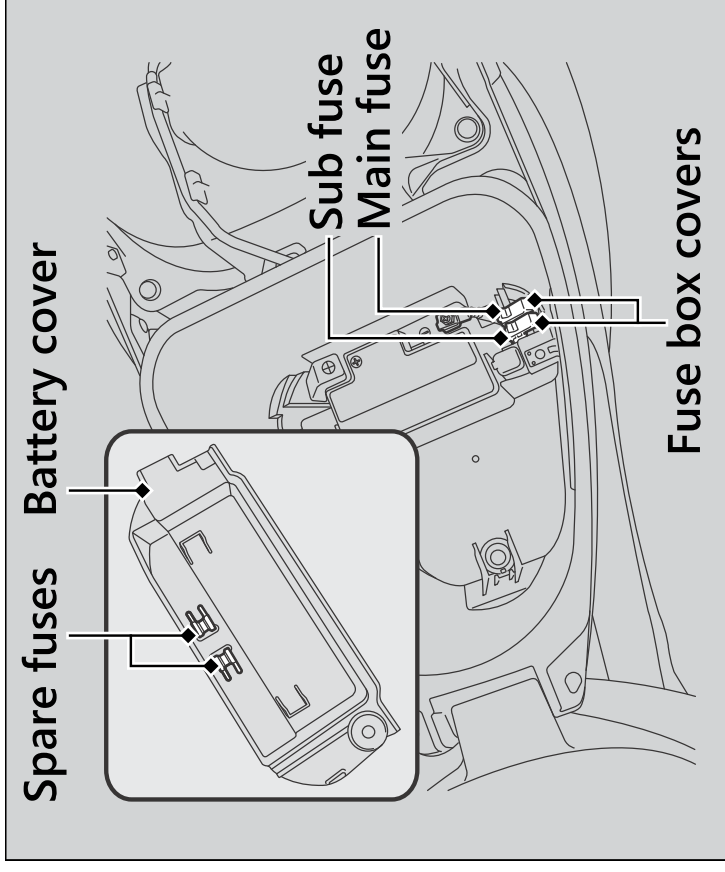

#### NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your vehicle inspected by your dealer.