


## Left Side Cover

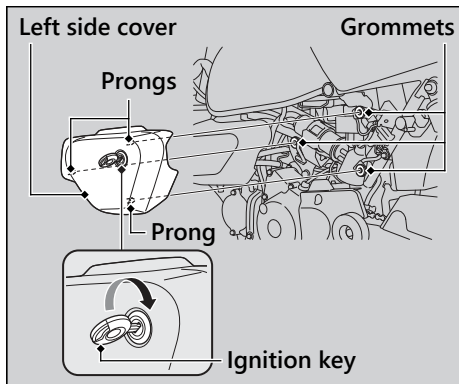

### Removal

1. Insert the ignition key into the lock.
2. Carefully pull the left side cover out from the grommets while turning the ignition key clockwise.

### Installation

1. Align the prongs with the grommets.
2. Push the left side cover into position while turning the ignition key clockwise.
  - Make sure that the left side cover is locked securely in position by pulling it lightly.
3. Remove the ignition key.