
Switches

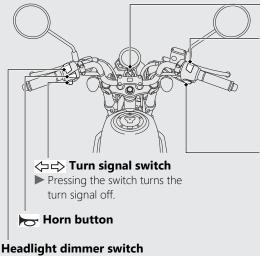

Engine stop switch

Should normally remain in the

- (Run) position.
- In an emergency, switch to the motor will not operate) to stop the engine.
- Start button

- **≣**(): High beam
- **■**D: Low beam