


E 9

**F - 14
CRANK ARM · CRANK PEDAL**

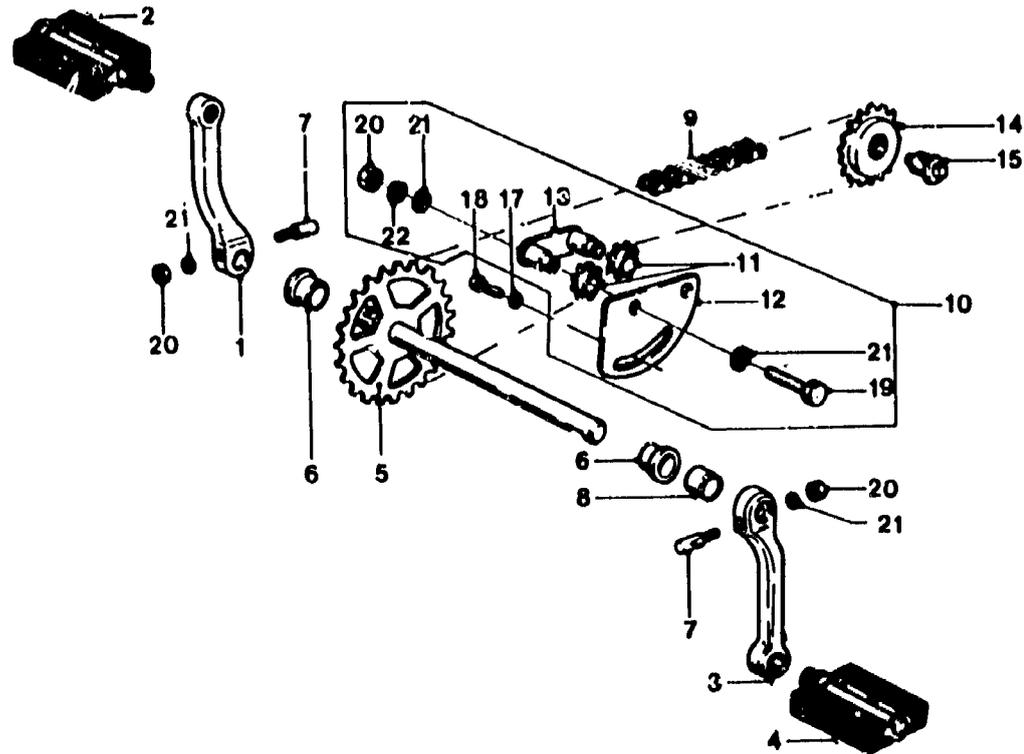

F.R.T.	Rel. N°	Part N°	Description	DX 50								PA 50				
				VH-B	VK-B	MH-B	MK-B	VCH-B	VCK-B	MVCH-B	MVCK-B	MH-D	VH-DK	VH-F	VH-NL	VCK-GB
0.2	1	40210-122-691	ARM. RIGHT CRANK	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	
	2	40215-099-921	PEDAL COMP. R. CRANK										(1)	(1)		
		40215-143-001	PEDAL COMP. R. CRANK	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)			(1)		
		90609-031-000	PEDAL COMP. R. CRANK										(1)		(1)	
	3	40220-122-691	ARM, LEFT CRANK	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	
0.2	4	40225-099-921	PEDAL COMP. L. CRANK										(1)	(1)		
		40225-143-001	PEDAL COMP. L. CRANK	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)			(1)		
		90709-031-000	PEDAL COMP. L. CRANK										(1)		(1)	
0.4	5	40230-148-020	SHAFT, COMP. DRIVE	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	
0.2	6	40234-197-000	BUSH, DRIVE SHAFT	(2)	(2)	(2)	(2)	(2)	(2)	(2)	(2)	(2)	(2)	(2)	(2)	
0.2	7	40235-093-000	PIN, CRANK ARM SETTING	(2)	(2)	(2)	(2)	(2)	(2)	(2)	(2)	(2)	(2)	(2)	(2)	
0.2	8	40236-148-721	COLLAR, DRIVE SHAFT	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	
0.2	9	40535-148-003	CHAIN PEDAL	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	
	10	40540-148-400	TENSIONER, CHAIN KIT	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	(1)	