


TRANSMISSION

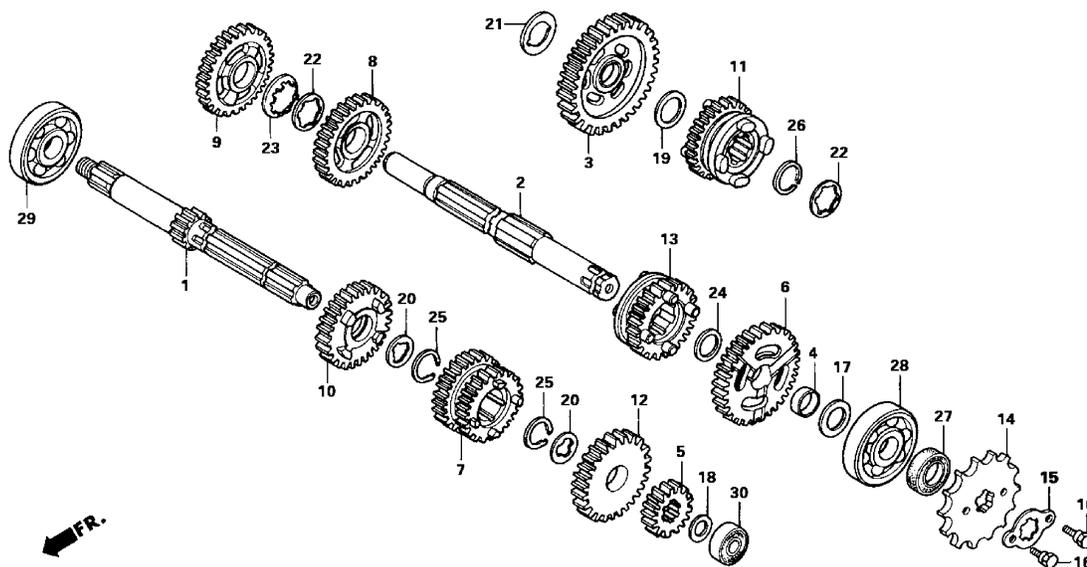

RS50E0800

4 =NSR50R'04

E-8

Engine
Serial Number

Ref	Description	From	To	AREA	QTY	Part Number	H/C
1	SHAFT, MAIN	-----	-----		1	23211-GT4-970	7739865
2	COUNTERSHAFT, TRANSMISSION	-----	-----		1	23221-166-601	2915411
3	GEAR (C1ST)	-----	-----		1	23420-166-600	7739907
4	BUSH (17MM)	-----	-----		1	23431-166-600	0914143
5	GEAR (M2ND)	-----	-----		1	23441-166-600	7739949
6	GEAR (C?2ND)	-----	-----		1	23451-166-600	6592844
7	GEAR (M?3RD?4TH)	-----	-----		1	23461-166-600	6592851
8	GEAR (C-3RD)	-----	-----		1	23471-166-600	7739980
9	GEAR (C-4TH)	-----	-----		1	23482-166-600	7740004
10	GEAR (M-5TH)	-----	-----		1	23491-166-600	7740020
11	GEAR (C-5TH)	-----	-----		1	23501-166-600	7740046
12	GEAR (M-6TH)	-----	-----		1	23511-166-600	7740061
13	GEAR (C-6TH)	-----	-----		1	23515-166-600	7740087
14	SPROCKET, DRIVE (14T)	-----	-----		1	23800-040-010	0263582
15	PLATE, DRIVE SPROCKET FIXING	-----	-----		1	23802-040-000	0168054
16	BOLT, DRIVE SPROCKET FIXING	-----	-----		2	90084-041-000	0174995
17	WASHER, THRUST (17.2MM)	-----	-----		1	90446-357-000	0322180
18	WASHER, THRUST (12MM)	-----	-----		1	90452-166-600	0914150