

E-12 CRANKCASE-OIL PUMP

E-12 CRANKCASE-OIL PUMP

Ref. No.	Part No.	Description	No. Used on	
			ATC 90	From To
1	11100-052-040	CRANKCASE, right	1	
2	11191-052-000	GASKET, crankcase	1	
3	11200-918-000	CRANKCASE, left	1	
4	15100-053-010	PUMP ASSY., oil	1	
5	15111-053-020	BODY, oil pump	1	
6	15119-028-020	GASKET, oil pump body	1	
7	15121-028-060	COVER, oil pump	1	
8	15128-028-030	GASKET, oil pump cover	1	
9	15181-028-050	SHAFT, oil pump drive	1	
10	15331-035-000	ROTOR, oil pump inner	1	
11	15332-035-000	ROTOR, oil pump outer	1	
12	15421-035-010	SCREEN, oil filter	1	
13	90015-028-000	BOLT, oil joint	1	
14	90031-028-010	BOLT A, cylinder stud	2	
15	90032-028-020	BOLT B, cylinder stud	2	
16	99405-001-000	PACKING, oil pipe	1	
17	90407-259-000	PACKING, drain cock	1	
18	91294-071-003	OIL-SEAL, 11.6×19×6	1	
19	92800-12000	BOLT, drain cock, 12 mm	1	
20	93500-05012-0 A	SCREW, pan, 5×12	2	
21	93500-06016	SCREW, pan, 6×16	1	
22	93500-06025	SCREW, pan, 6×25	2	
23	93500-06940	SCREW, pan, 6×40	9	
24	94111-05000	WASHER, spring, 5 mm	2	
25	94301-10140	PIN, knock, 10×14	2	

