



FUEL TANK

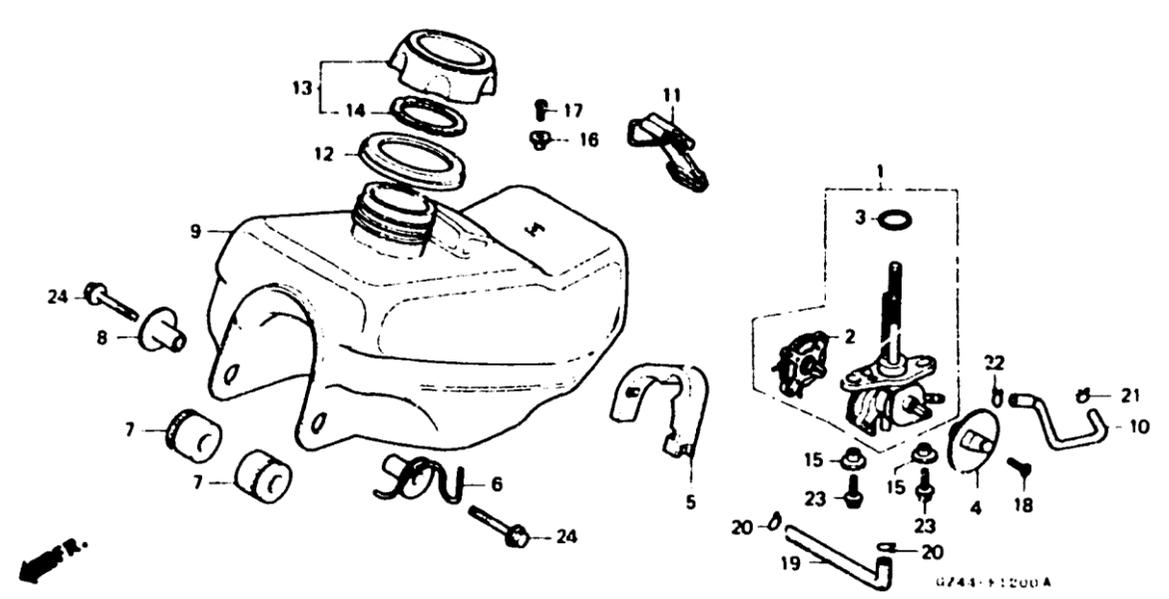

EZ90 '91		QTY	REQ	PART NUMBER	HONDA CODE
Ref. No.	BLOCK NO. F-12 DESCRIPTION				
	FRAME SERIAL NUMBER FROM TO				
21	CLIP B8, TUBE	1	95002-02080	0250647	
22	CLIP C9, TUBE	1	95002-50000	0053447	
23	BOLT, FLANGE, 6X16	2	95701-06016-00	2410892	
24	BOLT, FLANGE, 8X45	2	95701-08045-00	2533859	

OIL TANK

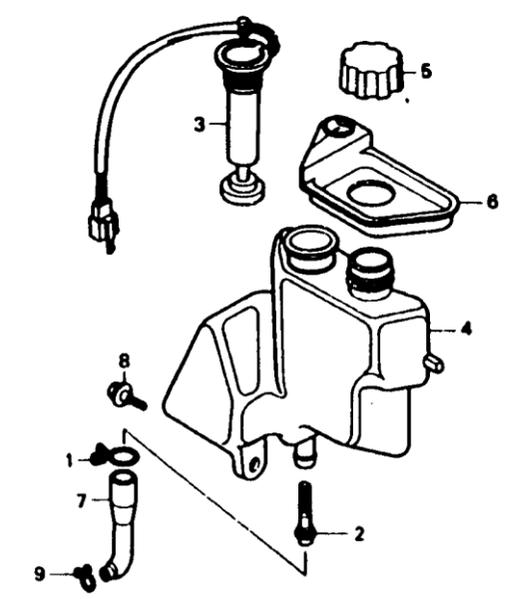

EZ90 '91		QTY	REQ	PART NUMBER	HONDA CODE
Ref. No.	BLOCK NO. F-13 DESCRIPTION				
	FRAME SERIAL NUMBER FROM TO				
1	CLIP, BREATHER TUBE	1	15772-551-000	0501353	
2	STRAINER, OIL	1	17502-187-000	1029982	
3	SWITCH ASSY., OIL LEVEL SWITCH ASSY., OIL LEVEL (MITSUBA)	1	35410-G24-670	3499936	
4	TANK, OIL	1	35410-G24-671	3448487	
5	CAP ASSY., OIL	1	55100-G24-670	3451028	
		1	55105-G24-670	3451036	
6	TRAY, OIL TANK	1	55121-G24-670	3451044	
7	JOINT, OIL STRAINER	1	55201-G24-670	3451051	
8	BOLT, FLANGE, 6MM	1	90111-162-000	0811141	
9	CLIP C9, TUBE	1	95002-50000	0053447	

CONTENTS

TITLE	GRID	PAGE
AIR CLEANER	C10	39
BATTERY	C10	38
BODY COVER	C3	25
CARBURETOR	B8	17
CAUTION LABEL	D4	51
CENTER COVER	C3	24
CRANKCASE	B6	13
CRANKSHAFT	B7	15
CYLINDER	B1	3
DRIVE FACE	B3	7
DRIVEN FACE	B4	9
EXHAUST MUFFLER	C11	41
FAN COVER	B1	2
FRAME BODY	D3	49
FRONT BRAKE PANELL	C6	30
FRONT COVER	C2	23
FRONT FORK	C4	27
FRONT WHEEL	C6	31
FUEL TANK	C8	35
GASKET KIT	B9	19
GENERATOR	B2	4
HANDLE COVER	C2	22
LEFT CRANKCASE COVER	B3	6
MARK	D5	52
OIL TANK	C9	37
PEDAL	C12	42
REAR BRAKE PANEL	C7	32
REAR CUSHION	D2	46
REAR FENDER	D2	47
REAR WHEEL	C7	33
SEAT	C8	34
STARTING MOTOR	B2	5
STEP	C12	43
SWING ARM	D1	45
SWITCH	C1	20
TOOLS	D4	50
TRANSMISSION	B5	11
WIRE HARNESS	D3	48