



Voltar Back Volver

Block number

•Address No. is provided (in place of the page No.) to help you refer to the part with the part No. or part name.

2 Block title

3 Service item/Flat rate time

A Reference number

•Title number marked with the parenthesis indicates that it continues from the previous page.

5 Part number

- 6 Description
- 7 HONDA color code

8 Assemblies

 Sections framed with broken lines in the exploded view drawings are available as complete assemblies. (Their individual parts can also be obtained).

(9) Color description

10 Note

•Notes are shown with the parenthesis in the part name column.

11 Required quantity

- •Reqd. QTY shown in the parenthesis indicates the optional part.
- Reqd. QTY marked with "N" indicates the optional part that should be selected as needed.
- •Reqd. QTY indicates the number of the part used in the block.

Serial number

13 Parts catalogue code

•When the parts catalogue code column is blank, it indicates that the part is applicable to all codes.


14

• Parts enclosed within a dotted line are covered in a different block.

15 🗘

i6 -

•A solid arrow indicates the block No. the part in question is connected to.

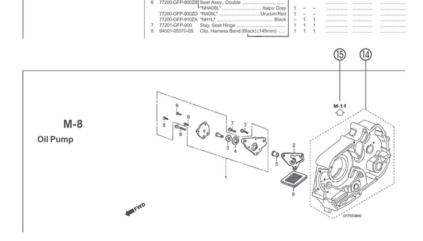

(7)(6)

61104-GCE-E40 77151-KW3-000 77151-MB1-870

77156-GFP-900 77160-GFP-900 77160-GFP-800

Parts Catalogue Structure

2

Ref. L.O.N.

1

M-1
Cylinder Head